

Anchor Sound System Operating Instructions



BASIC SYSTEM OPERATION

NOTE: Fully Charge Batteries Before First Use!

1. Set all Input Level Controls to minimum & Tones Controls to flat or the middle setting before turning your system on
2. Plug a wired microphone into the MIC 1 or MIC 2 jacks and/or plug an audio source into the LINE-IN jack
3. Switch POWER to ON, the red BATTERY LED will light
4. Slowly increase the Level Control for the input jacks used to the desired volume
5. Set SPEECH PROJECTION to ON for speech applications or OFF for standard applications (music & indoor use)
6. Adjust BASS & TREBLE controls to desired sound quality

For more information on the use and set up of the Anchor system please visit the following website:

http://www.anchoraudio.com/pdf/Lib_man.pdf