



Candy Floss Machine

Tips

1. Plug in floss machine and turn main power and motor switch to “on”
2. Always add sugar with the motor running.
3. Fill 90% full whenever you add sugar.
4. Reduce “heat control fine tuning” setting to eliminate smoking of machine.
5. Determine optimum setting for “heat range” and “heat control fine tuning”

Cotton Candy “Floss” Making Procedures

1. Moisten the inside of the floss pan with damp cloth so floss will adhere to the pan.
2. Note the direction of the floss as it is spun off the floss head.
3. Adjust floaters (on top of the spinner head): up for more lift, down for less.

Practice will give good control.

4. Hold the cone an inch or two at the pointed end between two fingers and thumb.
5. Break into the web of floss with a light flicking motion.
6. Lift up the cone with the ring of floss attached and wind the floss onto the cone.
7. Brush cone with damp sponge so floss does not adhere to cone.
8. Roll floss on outside of pan ONLY.
9. Turn ring of floss onto the cone in a figure “8” pattern to make a larger web.