

Inflatable Home Theatre Instructions



1. Unpack the all items from bag and boxes.
2. Lay the black frame out on the ground and place on the tarp that is provided.
3. Plug the AC air pump into an AC power outlet.
4. Locate the air inlet/outlet valves. Hook the pump up to one of the valves ensuring the other is securely sealed to prevent any air from escaping.
5. Turn the air pump on to begin to inflate the home theatre frame. (To completely inflate the will take several minutes.)
6. DO NOT completely inflate the frame. Inflate to approximately 80% full. Once the frame is 80% full, turn off the air pump and re-seal it ensuring no air escapes.
7. Attach the screen to the frame by clipping the screen into the grommets which run around the perimeter of the frame.
8. Once the screen is fully connected to the frame plug the air pump back in and completely fill the home theatre. This should pull the screen tight.

PLEASE NOTE: Be sure to remove the screen before deflating the home theatre.

Hooking up the Speakers to the Volume Control Box

It is suggested that you place the two speakers on the ground cloth next to the base of the frame. The Volume Control Box should sit next to the DVD player. It lets you adjust the audio volume level without having to walk up to each speaker.

To connect the speakers for use with your projector and DVD player use the RCA cables provided. Follow the steps and diagram below.

1. Connect the L + R audio output of your DVD player to the L + R input on the Volume Control Box.
2. Connect the Video output of your DVD player to the Video input of your projector.
3. Connect the L Audio output of the Volume Control Box to the L Line input of the XL-SP speaker you have located to the left of the screen and frame.
4. Connect the R output of the Volume Control Box to the R Line input of the other XL-SP speaker you have located to the left of the screen and frame.
5. Plug the AC line cords into the AC Power Inlet on the back of each speaker and insert the other ends into a properly grounded GFI outlet.
6. Set the volume level on the Volume control box to min.
7. Set the Line Input level, Bass and Treble controls on the back of each speaker to the middle (12:00 o'clock) position. For the XL-SP10 only, set the Master Volume control also to the mid (12:00 o'clock) position.
8. Turn on the Power switch on the back of each speaker. The light in the switch will light indicating AC power is on.
9. Place a DVD or CD into the DVD player and start the movie or audio.
10. Adjust the Volume Control Box for a good audio level. If you hear no sound, be sure the DVD is playing. Check all cable connections. If the sound is not loud enough with the Volume Control Box set to maximum, turn the Line Input Level control on the back of each speaker up. Also, be sure any volume setting in the DVD player or projector is set properly.

