

Porta-Cool

Operating Instructions



1. Place the Porta-cool unit in a spot where the inlet supply on the unit has access to a fresh air supply. (There needs to be a place where the air from the Porta-Cool unit can be exhausted to ensure that air that has gone through the cooling process does not get re-circulated.)
2. Connect to a water supply line and then begin to fill up the unit's sump tank with water. (Once the sump tank is full the units float valve will shut off the water supply. For the unit that does not need a water supply hooked up, simply just fill the sump tank.)
3. Turn the pump switch to the "ON" position.
4. Turn the fan switch to the "ON" position or to one of the available speeds. (It is recommended that you go through the speeds slowly to allow the fan to obtain its full speed. First on LOW then switch to MEDIUM.)

NOTE: The cooling pads on the unit need to be saturated before the Porta-Cool will produce cold air. The unit automatically wets the pads once it has been started up.